

C A M B R I D G E

SCALE WORKS, INC.

Model: SS660-PT-OB Stainless Steel Poly-Top

Floor Scale Series

(On-Board Junction Box)

Installation, Set-Up and Operation Manual



Cambridge Scale Works, Inc. • P.O. Box 670 • Honey Brook, PA. 19344

(800) 292-7640 • (610) 273-7040 • www.cambridgescale.com

Manual P/N: 5999-1096-00

Table of Contents

Section 1.0 General Introduction	2
Section 2.0 Specifications	2
Section 3.0 Installation	3
Section 3.1 Ramp Installation	4
Figure "A" Wiring Diagram	5
Figure "B" Ramp Installation	6
Section 4.0 Corner Off Set Adjustments	7
Section 5.0 Troubleshooting Procedures	7
Section 6.0 Warranty	8
Section 7.0 Assistance	8

Section 1.0

General Introduction

You have purchased the finest Stainless Steel Floor Scale on the market. It has been designed to give the customer many years of trouble free service. This scale was manufactured in the USA using the best steel, load cells, junction boxes and fabrication techniques to ensure a long life.

At some point your Cambridge Scale will require calibration and/or service. There are many qualified Cambridge service dealers/distributors across the United States to assist you. Thank you for purchasing a [product fully manufactured in the U.S.A.](#) by [Cambridge Scale Works, Inc.](#)

Section 2.0

Specifications

Model: SS660-PT-OB Specifications (Standard Sizes)							
Size	Capacity	Ship Weight	Poly-Top Weight	Size	Capacity	Ship Weight	Poly-Top Weight
24"x24"x3.75"	1,000 lb.	85 lb.	20 lb.	48"x60"x3.75"	5,000 lb. *	335 lb.	100 lb.
	2,500 lb.	85 lb.	20 lb.		10,000 lb. *	430 lb.	100 lb.
30"x30"x3.75"	1,000 lb.	110 lb.	32 lb.	48"x72"x3.75"	5,000 lb. *	405 lb.	120 lb.
	2,500 lb.	110 lb.	32 lb.		10,000 lb. *	510 lb.	120 lb.
36"x36"x3.75"	1,000 lb.	160 lb.	45 lb.	60"x60"x3.75"	5,000 lb. *	425 lb.	125 lb.
	2,500 lb.	160 lb.	45 lb.		10,000 lb. *	530 lb.	125 lb.
	5,000 lb.	160 lb.	45 lb.	60"x60"x4.75"	20,000 lb. *	785 lb.	125 lb.
48"x48"x3.75"	1,000 lb.	210 lb.	80 lb.	60"x84"x4.75"	10,000 lb. *	1,050 lb.	175 lb.
	2,500 lb.	210 lb.	80 lb.		20,000 lb. *	1,275 lb.	175 lb.
	5,000 lb. *	210 lb.	80 lb.	* NTEP APPROVED			
	10,000 lb. *	335 lb.	80 lb.	CUSTOM SIZES AVAILABLE, CONSULT FACTORY			

Section 3.0 Installation

Installation

1. Before cutting the metal bands, inspect the skid for possible damage. If there is damage, notify the freight carrier and sign the freight bill noting possible damage to the skid or scale.
2. After the metal shipping bands are cut and protective packaging is removed from the base, remove the poly-top deck from the scale frame.
3. Using a chain or cable, lift the base from the skid. **Note:** Check to be sure that the chain or cable has sufficient lifting capacity for the scale weight.
4. The scale should be lifted approximately 12" (1 foot) off the floor. This will allow ample clearance to move the scale away from the skid or remove the skid from underneath the scale.
5. Move the base to its location/install site.
6. Locate the stainless steel leveling feet installed in each of the four corners. Turn each leveling foot down approximately 2-3 turns.
7. Lower the stainless steel poly-top floor scale into the location where the scale is to be used. Check the four corners to make sure the leveling feet are set solid to the floor. Adjust the leveling feet as required to level the scale.
8. With a wrench, wind the jam nut on the (4) leveling feet up to jam the nut to the load cell. This will keep the leveling foot from shifting.
9. Remove the chain or cables that were used to lower the scale into position.
10. Flip up the hinged stainless steel cover protecting the stainless steel junction box. The indicator cable is secured around the stainless steel junction box. Unwind the cable and run the cable underneath the scale so it will not be pinched when the top access cover is replaced. Lower the hinged stainless steel cover making sure the indicator cable is not pinched under the cover.
11. Replace the 1" thick poly-top onto the scale frame.
12. Connect the base to the indicator by following the instructions in the indicator's service manual and scale base wiring diagram. **See Figure A.**

Section 3.1

Ramp Installation

1. Set the height of the base to approximately 4" by adjusting the leveling feet up or down.
2. Insert (2) 1/2-13 eye bolts into the holes in the ramp deck. Hook the chain or cable to the eye bolts to lift and position the ramp. Position the ramp alongside the base with it off set approximately 6" to 8". **See Figure B.**
3. Slide the ramp towards the base until the scale and ramp are approximately 1/4" to 1/2" apart.
4. Slide the ramp to the left until the horseshoes (ramp ears) hook around the leveling foot and the scale and ramp plates align.
5. Lastly, adjust the leveling feet so the scale and ramp are flush and all four corners are setting solid to the floor. Tighten the jam nuts on the leveling feet so they are snug against the load cell, but **DO NOT OVERTIGHTEN**. Although the scale cannot "walk" from the ramp with this unique design, it is strongly recommended that the ramp be lag bolted to the floor. (2) 1/2" lag down holes are provided, one on each side of the ramp.

Figure A.

Scale Base Wiring Diagram

Scale Position: Right Side Up


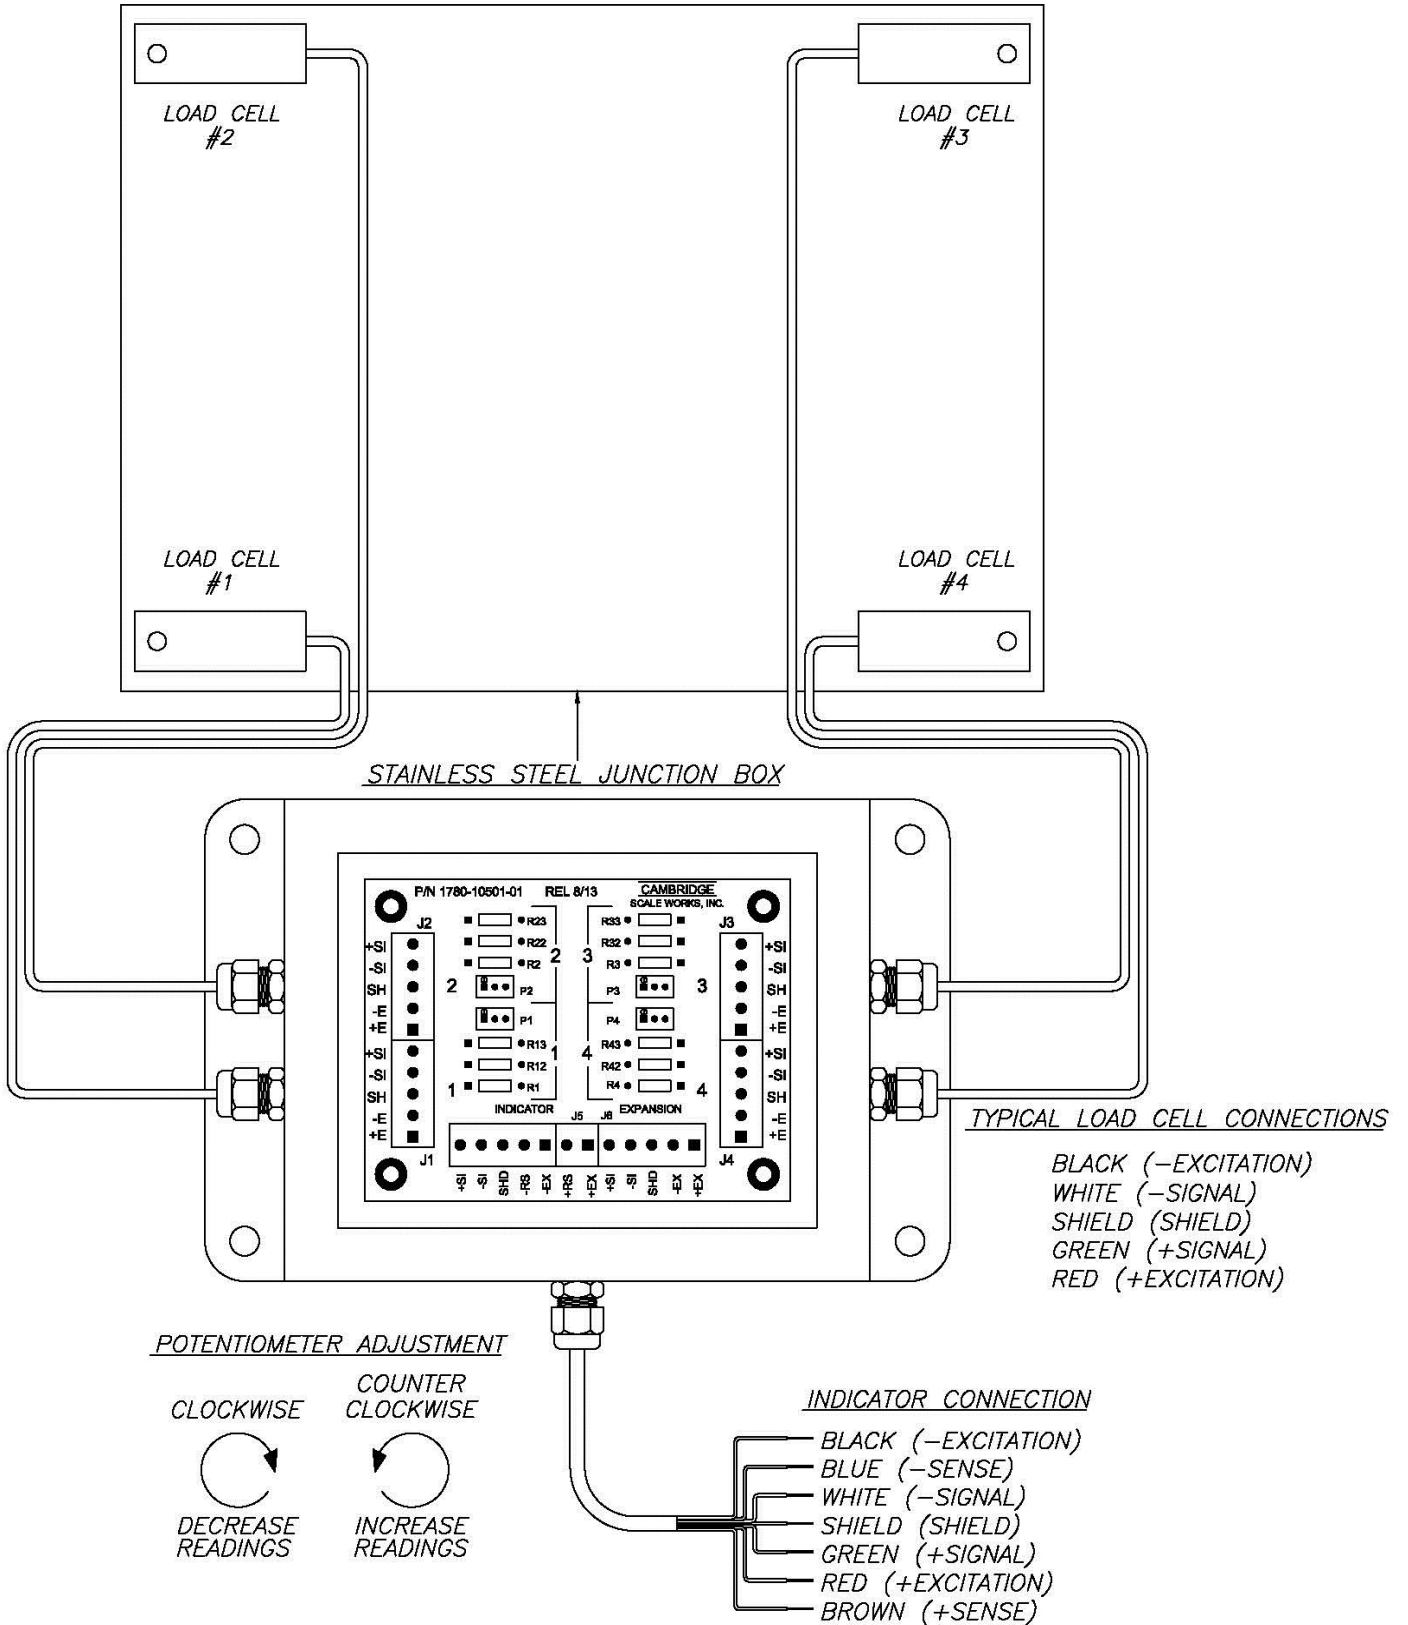


Figure B.

Ramp Installation Illustration

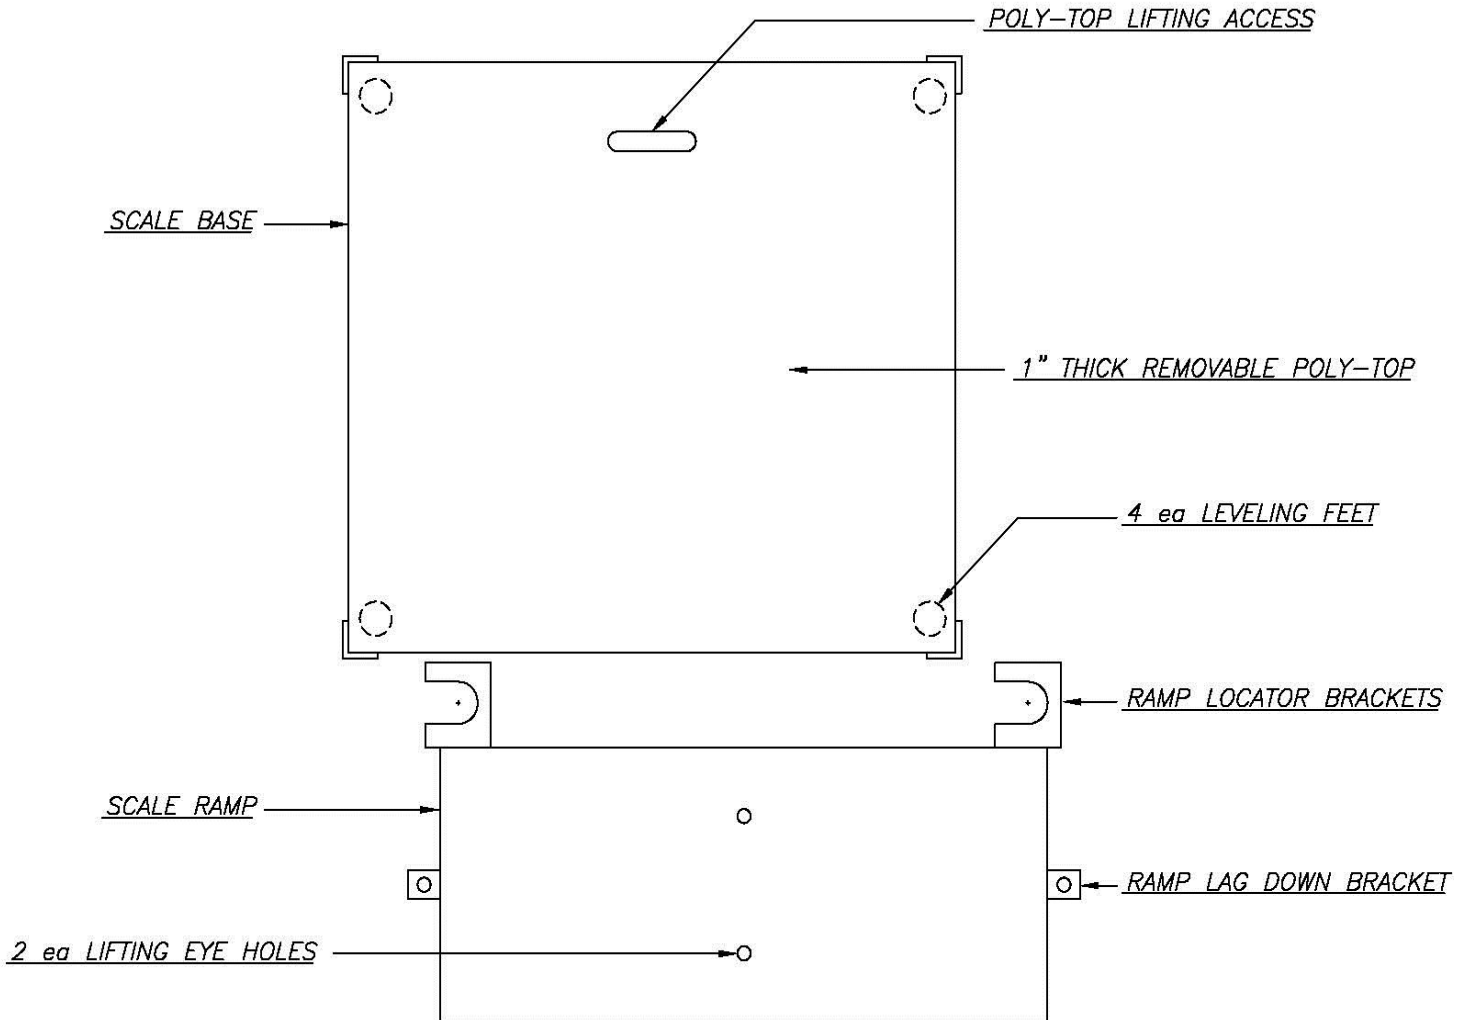

Section 4.0

Corner Offset Adjustments

1. Remove the poly-top from the scale frame.
2. Lift the hinged stainless steel cover from the junction box.
3. Remove the (4) SS Screws holding the SS cover to the junction box.
4. Refer to the load cell wiring diagram to locate the correct potentiometer to be adjusted. **See Figure A.**
5. After locating the correct potentiometer for the corresponding corner to be adjusted, turn the potentiometer screw clockwise to decrease the corner reading or counterclockwise to increase the corner reading. **NOTE:** Adjusting one corner may have an effect on the other corners. After adjustment is complete, all corners should be rechecked to ensure accuracy.
6. Replace the SS cover on the junction box and replace the (4) SS screws. **NOTE:** DO NOT OVERTIGHTEN
7. Lower the hinged stainless steel cover over the junction box.
8. Replace the poly-top onto the scale frame.
9. Recheck the scale with test weights & recalibrate if necessary.

Section 5.0

Troubleshooting Tips

1. Check for a pinched off or damaged indicator cable.
2. Check to see if the indicator cable is correctly wired to the indicator.
3. Check that the (4) leveling feet are snug to the floor and that the base is adjusted to the correct height.
4. Check for any obstructions between the leveling feet and the load cells or between the load cells and the base framework. Also, check for obstructions between the scale frame and the floor.
5. Check for loose hardware on the load cell mounts.
6. Check for loose or damaged wires at the junction board.

Section 6.0

Warranty Policy

CAMBRIDGE warrants the **SS660-PT-OB** to be free of defects in workmanship and/or materials for 12 months from the date of shipment. This warranty of workmanship and/or materials is valid, if in the opinion of **CAMBRIDGE** the equipment has not been mechanically, environmentally, or electrically abused.

This warranty is limited, at the option of **CAMBRIDGE**, to repair, replace or an appropriate credit adjustment, not to exceed the original equipment sale price paid to **CAMBRIDGE**. **CAMBRIDGE** assumes no liability in connection with the sales of its products beyond that stated above.

Warranty replacement parts and or repair services are performed at the factory in Cumberland, Maryland or by an authorized service group approved by **CAMBRIDGE**.

Warranty does not include travel expense if a factory technician is requested to perform repairs at a location other than the factory.

It is the user's responsibility to follow the proper set-up, calibration and operating procedures of the **SS660-PT-OB** as described in this manual. If the operator has difficulty using their **SS660-PT-OB** properly, please contact **CAMBRIDGE** at 1-301-724-4082. Any one of our Technicians will be happy to work with the user via telephone.

Thank You!

Section 7.0

Assistance

If at any time you require assistance with your **Model: SS660-PT-OB**

End User please contact your servicing scale dealer.

Authorized Cambridge Dealer/ Distributor please contact:

CAMBRIDGE SCALE WORKS, INC.

115 West Mary Street
Cumberland, MD 21502
Phone: (301) 724-4082
Fax: (301) 724-4964